

 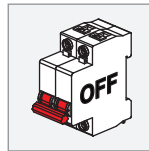
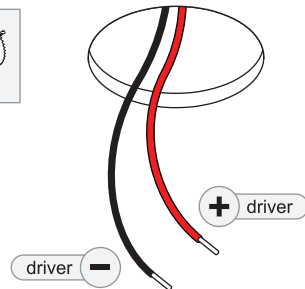

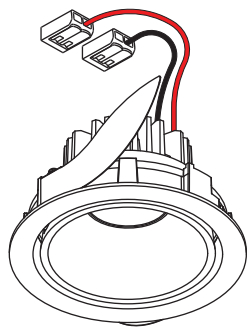
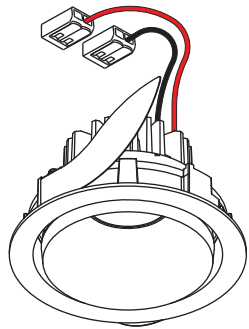
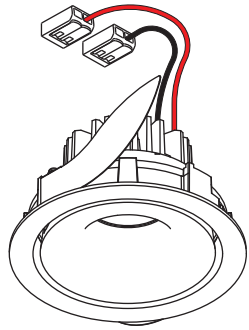
 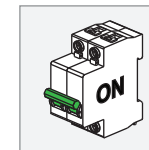
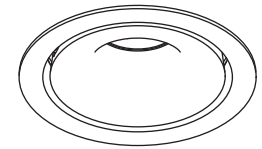



127710XX_127711XX_127712XX_127713XX_127714XX_127715XX_127716XX_127717XX_127718XX_127810XX_127811XX_127812XX_127813XX_127814XX_127815XX_127816XX_127817XX_127818XX_127910XX_127911XX_127912XX_127913XX_127914XX_127915XX_127916XX_127917XX_127918XX

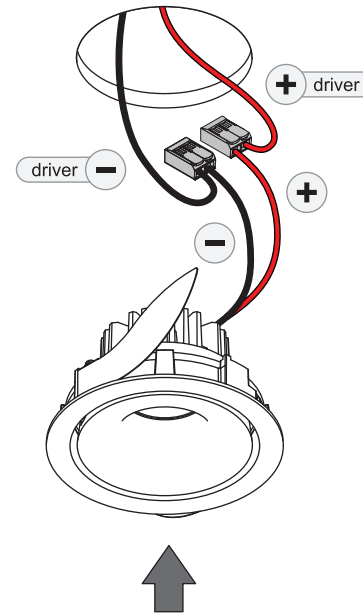

Drive Current (mA)	Forward Voltage		Power (W)
	min (Vf)	max (Vf)	
350	16,5	19,2	6,2
500	17,1	19,8	9,2
700	17,7	20,8	13,4
RED		BLACK	

For serial connection, respect polarity!
 Not suited for connection to mains voltage.
 Combine with a Modular LED-driver.

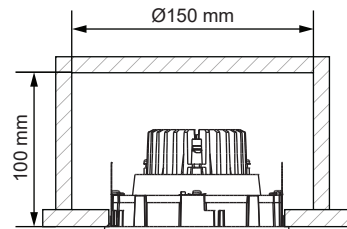

Touching the LED can result in permanent damage of the light source. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.



A discharge of static electricity may damage sensitive components. Always be properly grounded when touching leads or circuitry inside the luminaire. Use a wrist strap connected by a ground cord to the housing. Avoid touching the light sources with bare hands.

For latest version of driver matrix and available accessories check www.supermodular.com or connect with your sales contact.

