


LEDZ GLARE-LESS DOWNLIGHT

FOR STORAGE

◆ PART NAME

This illustration shows the parts in common. It may not be exactly the same as your unit.

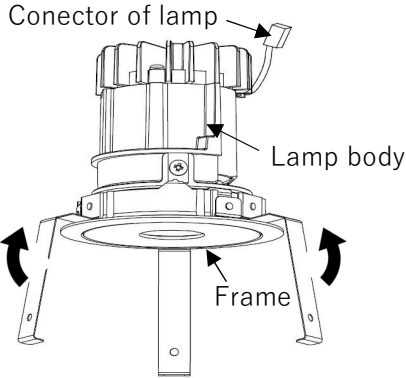

⚠ For apparatus in service for more than three years, the apparatus and cord should be checked annually to ensure safety. cord should be checked annually to ensure safety.

■ HOW TO CLEAN

⚠ Make sure to turn off the master switch before cleaning the lamp. It may cause electric shock.

- Apply the neutral detergent, wipe with well-wringed cloth and finish with dried cloth.
- Do not wipe the lamp with thinner or volatile substances such as gasoline, or acid/alkali detergent or insecticide.

● Products should be installed in accordance with International Wiring Regulations. If in doubt, contact a qualified electrician.
For after-sales services, change of address or gift of product to persons in other areas, contact distributor where purchased, or sales office nearby.

◆ SPECIFICATION

Categories	Model	LED Color	Light Distribution	Adjacent Illumination Limit
600/800 TYPE	GERD5886WA/BA-T	Warm (3000K)	Narrow	0.1m
	GERD5887WA/BA-T		Wide	
	GERD8440WA/BA-T	Warm (2700K)	Narrow	
	GERD8441WA/BA-T		Wide	

Categories	Ballast Model	Dimmable	Input Voltage	Input Current	Module Power Consumption	Frequency
600 TYPE	GRX466N-T	Non dimmable	AC220V	50mA	10.2W	50Hz/60Hz
			AC240V	47mA	10.2W	
	GRX479N-T	1-10V dimmable	AC220V	59mA	10.3W	
			AC240V	58mA	10.4W	
800 TYPE	GRX467N-T	Non dimmable	AC220V	68mA	14.2W	
			AC240V	63mA	14.3W	
	GRX480N-T	1-10V dimmable	AC220V	73mA	14.2W	
			AC240V	63mA	14.3W	


◆ ABOUT LED LIGHT SOURCE

Compared with common incandescent lamp and fluorescent lamp, the LED point sources are dispersed, so there may be differences in light emitting. LED module cannot be replaced.

◆ INSTALLING NOTES

- Make sure the luminaires with the mark as right side drawing should not contact the surface of combustible materials. The distance from luminaires to the combustible materials should follow the standard below.

Categories	Minimum Distance	Diameter of hole
600/800TYPE	100mm	Φ75 ± 1

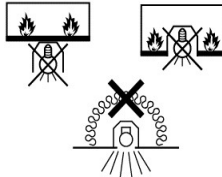

- Make sure the luminaires with the mark as right side drawing should not be covered by thermal insulation.

◆ INSTALLING NOTES

1. Turn off the master switch for safety. Otherwise it may cause electric shock.


⚠ It may cause electric shock.

2. Make sure to maintain enough strength of wall base for installation to support the weight of apparatus. Drill them bedded hole as specified. (Effective installation thickness 3-25mm)

3. Insert the power cable into terminal block.
 - Wire stripping length: 6.5mm/0.26in.
 - Make sure the cable is inserted until it reaches the screw.
 - The current carrying capacity shall be below 30A.


Compatible wire(single wire)

 AWG 22-10
6.5mm/0.26in



Power cable

Screw

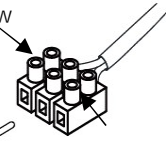

⚠ Incomplete connection or overload may cause fire or power leakage.

⚠ Always make sure to have proper ground connections as specified by the national regulations. Failure to do so may cause fire or electric shock.

 
4. Put the power unit into the drilled hole and lay it within the ceiling. The power supply unit can not be turned.

⚠ The power supply should not touch apparatus. Failure to do so may cause fire.

5. Connect the connector of power supply with the connector of lamp.

Connector of power supply

Buckle



6. Push and insert the frame into the drilled hole. Press the three mounting springs indicated by the arrows, then push and install the lamp body into the drilled hole. (Refer to the front view)